

NEED HELP?

DO NOT RETURN TO STORE. Please contact our customer service center in your area.

TREE ASSEMBLY INSTRUCTIONS


Congratulations on purchasing your new tree from **Polygroup®**!

This tree comes with Quick Set® feature - allowing you to set up your tree and light it up easily!


Carefully follow the instructions below on how to quickly and easily set up your new tree:

1. Choose a level surface near a wall outlet.
2. Assemble the tree stand (See Fig. A).

Fig. A - Tree Stand Assembly

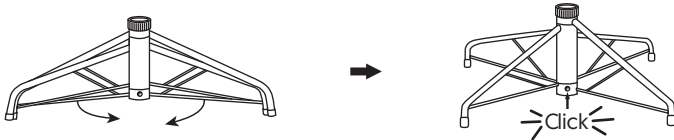


Pull apart the legs of the stand so that they are snapped into an x-shape, place the tree stand on a level surface.

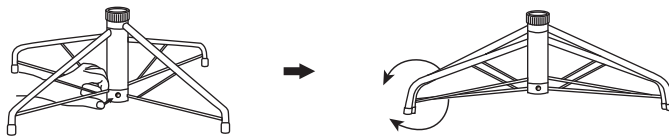

To close the stand, press the metal button and fold the legs together.

Fig. B - Tree and Light Assembly

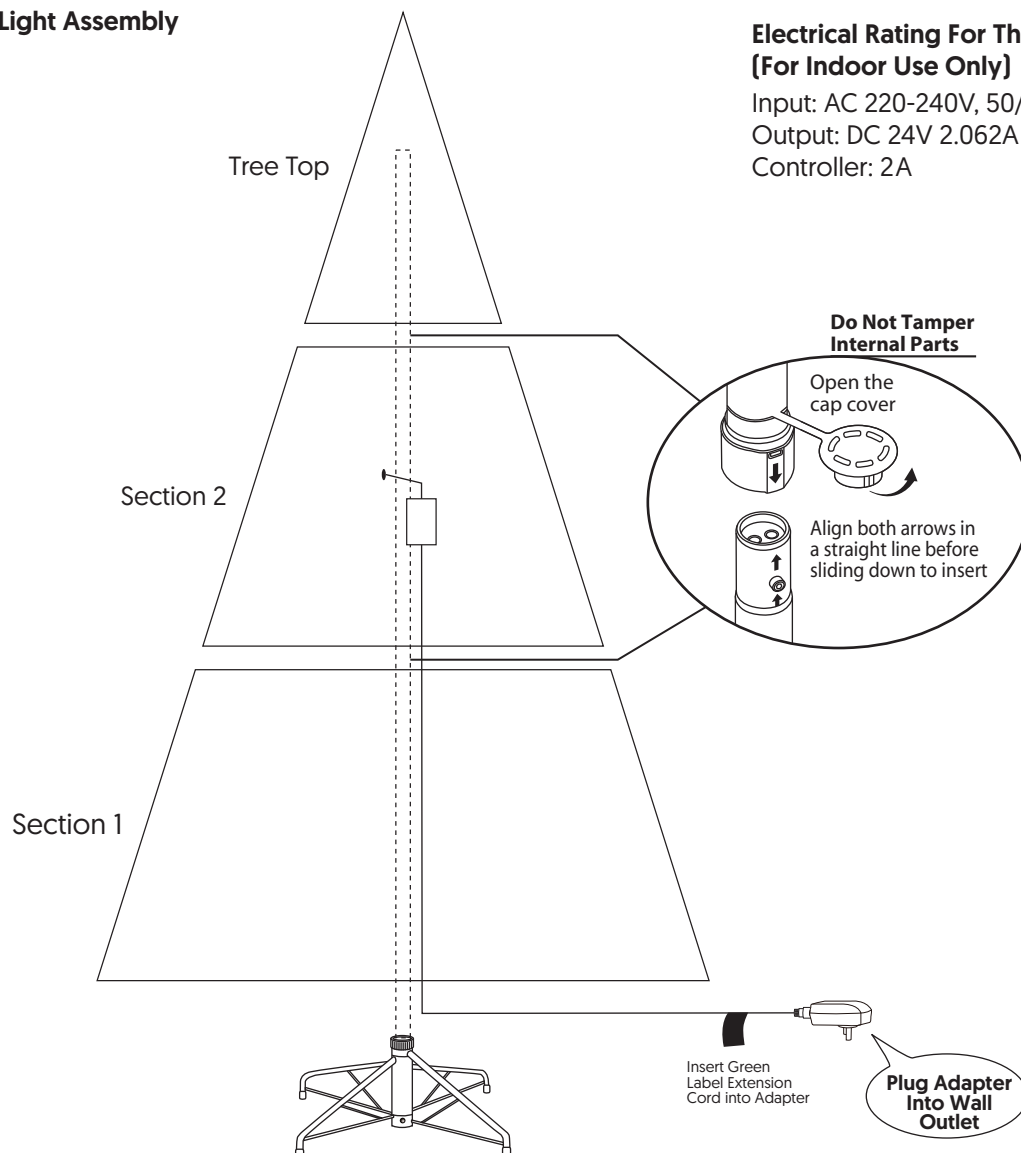

Electrical Rating For The Tree (For Indoor Use Only)

Input: AC 220-240V, 50/60Hz, 0.378A

Output: DC 24V 2.062A

Controller: 2A

3. Identify all tree sections **(See Fig. B)** by the sticker on them, and start assembling from bottom to top.
4. Open the protective cap of pole, and insert the pole into the stand. Allow all branches fall down into place. Check to make sure that all wires are free from branch hinges.
5. Shape the tree section one branch at a time. Start with the tips closest to the pole and move outwards. Fan all the tips out in alternating directions, and slightly upsweep them for a natural look **(See Fig. C)**.

Fig. C

Top view



Side view



6. Repeat **Step 4 and 5** for the upper tree section[s] until tree top is installed and shaped.
7. Connect plug with adapter, and plug it in to the wall outlet as indicated in **Fig. B**.
8. Step back and view your tree. Shift branches to fill any gaps. Your Christmas tree is now ready to be decorated.

STORAGE INSTRUCTIONS

1. Unplug from power source, and detach plug from adapter. Remove all ornaments and decorations.
2. Disassemble the tree from top to bottom. Gently lift pole straight up to remove from the lower section, and fold all branches toward the pole.
3. Close the protective caps on the poles to avoid damaging the internal parts **(See Fig. D)**.
4. Place the disassembled tree into the shipping box and tape it shut.
5. Store your tree in a cool, dry place away from sunlight. Exposure to excessive heat or humidity may damage your tree.

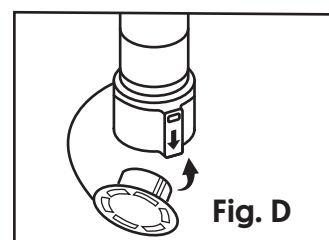


Fig. D

TROUBLESHOOTING TIPS

If Tree Does Not Illuminate / Some Bulbs Do Not Light or Flicker

1. Please check to make sure that all plugs are properly connected and adapter is plugged into the wall outlet.
2. Turn the poles gently to make sure pole to pole sections are connected properly
3. Check for loose connection between light string plugs and extension cords.

Loose Hinge Pin

1. Place the branch into the hinge bracket **(See Fig. E)**.
2. Insert a new hinge pin all through the holes of bracket, and secure with a washer **(See Fig. E - close up)**.


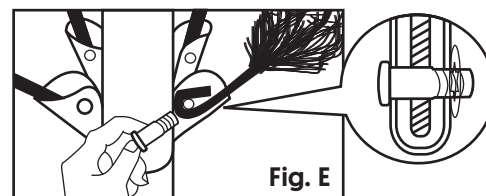


Fig. E

REMOTE CONTROL INSTRUCTIONS

You can customize the light functions by using the Remote Control.


KEY FUNCTIONS

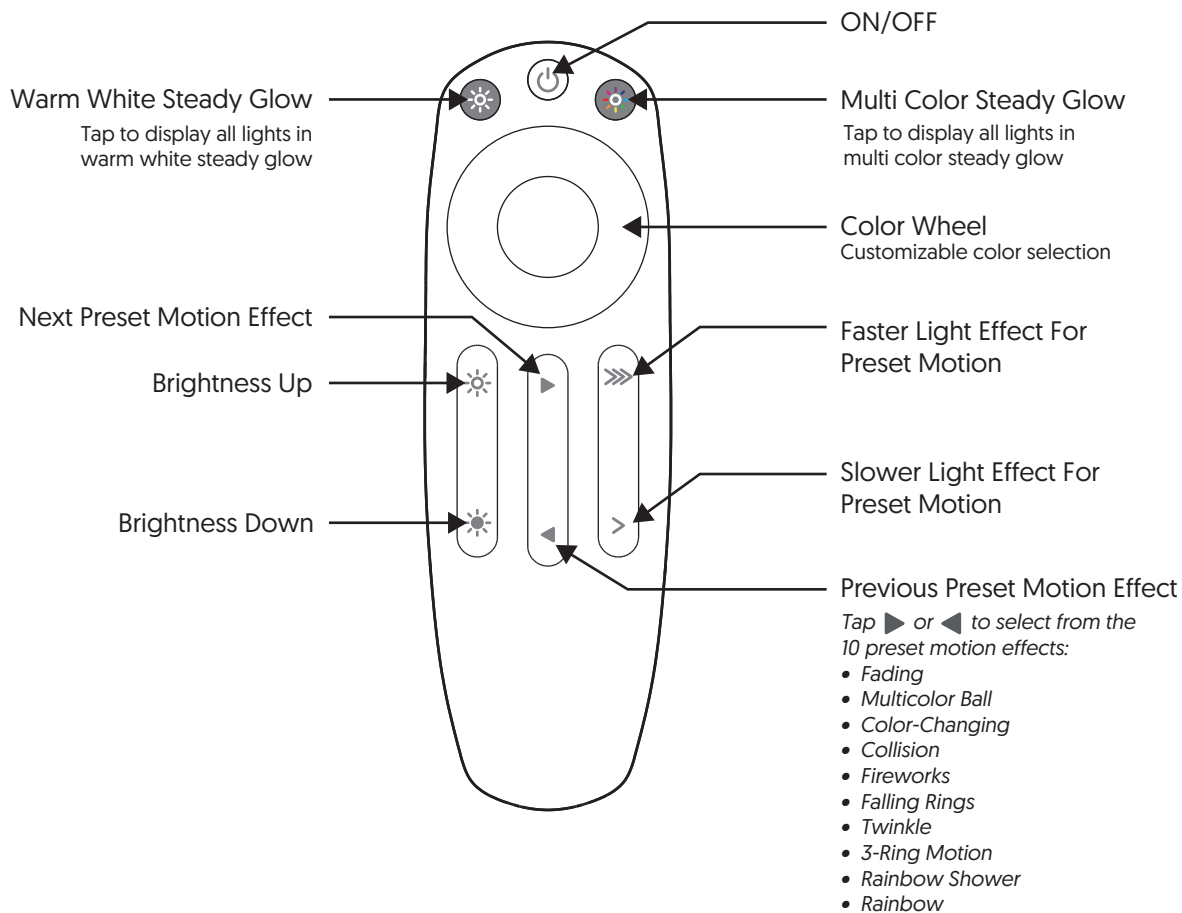

WARNING: This product may potentially trigger seizures for people with photosensitive epilepsy when using the motion effect light modes.

BATTERY REPLACEMENT OF REMOTE CONTROL

1. Unscrew and remove the battery cover.
2. Insert two new AAA batteries, ensuring the polarities (+/-) are correct.
3. Replace the battery cover and tighten the screw.

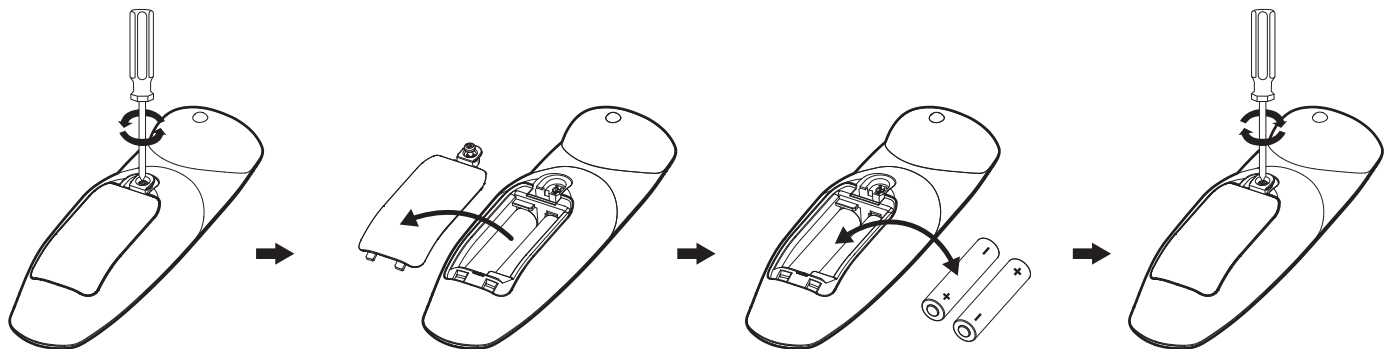

IMPORTANT SAFETY INSTRUCTIONS

- WARNING: SMALL PARTS, KEEP AWAY FROM CHILDREN.
- Do not expose light set to moisture.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon - Zinc), lithium, or rechargeable (NiCd, NiMH or other type) batteries.
- Remove batteries when not used for an extended period of time, or when depleted.
- Dispose of used batteries properly.
- Use only AAA-size (UM4/LR03) batteries for the remote controller.
- Clean the battery contacts prior to battery installation.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

CAUTION

1. To reduce the risk of fire and electric shock:
 - a) Use only the power supply that is provided with this product. Using a different adapter will damage the lights and may cause fire, or electrical shock hazards;
 - b) Do not mount or support strings in a manner that can cut or damage wire insulation.
2. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
3. Do not connect the chain to the supply while it is in the packing.
4. The lamps are not replaceable.
5. The controller and remote controller (if included) can only be used with this product.
6. The minimum clearance distance from the top and sides of the control gear (TS-49.5W24V-ES44) to normally flammable building elements is 75mm.
7. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

SPARE PARTS

This tree includes sets of hinge pins & washers.

If extra parts are needed, please contact our customer service center.

					
UK	+44 (0) 330 090 4414	support@poly-group.co.uk	BG		service.polygroupbg@gmail.com
FR		aide@polypool.fr	GR	+30 210 6831030	info@homeandcamp.gr
ES		apoyo@polypool.es	HU		sales@globalbrandscee.com
IT	+39 (0) 332 730 083	info@globalfar.com	RO	+40 726 473955	polygroupservice.ro@gmail.com
DE	+49 (0) 621 845 5210	service@rms-gruppe.de	RS	+381 (0) 637 137 822	polygroupsrbija@gmail.com
NL	+31 (0) 88 002 06 55	service@poly-group.nl	DK		polygroup@maxtoys.dk
AU	+61 1800 955 817	info@toyallianceleisure.com.au	NZL	+64 (0) 800 440 017	info@toyallianceleisure.co.nz